

C O L D B O O T P R O C E D U R E

Maintenance Menu

COPYRIGHT (C) FORTUNE SYSTEMS, REV 1.3 MON DEC 20 12:48:23 PDT 1982

F1	CHANGE FRONT PORT SPEED	2400
F2	CHANGE BACK PORT SPEED	9600
F3	CHANGE POWER-UP ACTION	BOOT UP
F4	CHANGE BOOT DEVICE	WD BOOT, DRIVE #0
F5	CHANGE BOOT PROGRAM NUMBER	0
F6	CHANGE FLOPPY DRIVE 0 TYPE	SHUGART
F7	SET BOOT FILE NAME	HD02/UNIX
F8	READ SETTINGS FROM EAROM	
F9	SAVE SETTINGS FROM EAROM	

EXECUTE
HELP

TYPE ANY HIGHLIGHTED KEY

EAROM HAS BEEN CHANGED X TIMES

- F4 Floppy is set*
1. Insert Volume 1 of Cold Boot Set.
 2. Press "RESET"
 3. Press CANCEL as start-up sequence begins.
 4. At Maintenance Menu, select F7; type fd02/sa/reconf
 5. RETURN, then EXECUTE
 6. System will start to boot up.

Configuration Menu

FORTUNE SYSTEMS CONFIGURATION MENU

POWER UP ACTION = BOOT	DAYLIGHT SAVINGS = YES
BOOT DEVICE = HD	LINE FREQUENCY = 60
BOOT DRIVE # = 00	LANGUAGE = ENGLISH
BOOT PROGRAM # = 00	FLOATING POINT? = YES
BOOT FILE = HD02/UNIX	HEX NUMBER = 0000
FLEX DRIVE #1 = SHUGART	NUMBER BUFFERS = 010
FLEX DRIVE #2 = SHUGART	NUMBER INODES = 040
FLEX DRIVE #3 = SHUGART	NUMBER FILES = 040
FLEX DRIVE #4 = SHUGART	NUMBER TEXTS = 005
ROOT DEVICE = HD02	NUMBER CLISTS = 010
SWAP DEVICE = HD01	NUMBER PROCESSES = 010
TTY00 PORT SPEED = 2400	MAX PROCESS SIZE = 160
TTY01 PORT SPEED = 1200	SET PARAMS AUTO? = YES
CONSOLE LOCATION = CRT	APPROX # OF USERS = 3
TIMEZONE = PACIFIC	

EPROM HAS BEEN CHANGED NN TIMES

F1 = STORE SCREEN DATA IN EPROM F2 = READ CURRENT EPROM SETTINGS
F3 = CONTINUE WITH SYSTEM STARTUP F4 = RESTART WITH SCREEN DATA

7. At Configuration Menu, press RETURN until you get to "Root Device"; type fd02
8. RETURN once to get to "Swap Device"; type fd01 RETURN
9. Press F2 to continue with system startup.

F2

BOOT

:

10. Type: fd02/unix; then RETURN

SELECT A FUNCTION KEY: [HELP] FOR MORE INFORMATION

[F1] TO COMPLETELY ERASE AND RELOAD YOUR DISK

[F3] TO RETRY STARTING UP THE SYSTEM AS
SPECIFIED IN THE MAINTENANCE SCREEN

.... (ANYTHING ELSE TYPED IN WILL BE
EXECUTED AS A MAINTENANCE COMMAND.)

SELECT:

YOUR FORTUNE COMPUTER IS CURRENTLY CONFIGURED TO WORK
WITH A XXXX DISK.

PLEASE CHECK THE SYSTEM CONFIGURATION DECAL LOCATED ON THE
OUTSIDE OF THE COMPUTER TO DETERMINE THAT THIS IS CORRECT.

IF YOU ARE UNABLE TO FIND THIS DECAL, CONTACT YOUR FORTUNE DEALER.

IS DISK XXXX PRINTED ON YOUR SYSTEM CONFIGURATION DECAL?

PRESS [F1] FOR YES

PRESS [F2] FOR NO

PLEASE SELECT ONE OF THE FOLLOWING DISKS BY ENTERING THE
CORRESPONDING NUMBER AND PRESSING (RETURN):

1: Z5	7: C5	13: R15	19: H5	25: J30	31: K40
2: A5	8: C10	14: R20	20: H10	26: M40	32: L5
3: A10	9: C15	15: N10	21: H20	27: M50	33: L10
4: B5	10: C20	16: N20	22: H25	28: K10	
5: B10	11: R5	17: N30	23: I20	29: K20	
6: B20	12: R10	18: G25	24: J20	30: K30	

THE DISK INFORMATION IS LISTED ON THE SYSTEM CONFIGURATION DECAL
ON THE OUTSIDE OF YOUR FORTUNE SYSTEM.

13. Check decal on the back of the CPU to find out what type of hard disk your system utilizes.
14. Type appropriate number to describe hard disk.

CLEARING HARD DISK. PLEASE WAIT

TESTING HARD DISK. PLEASE WAIT

YOUR FORTUNE COMPUTER IS CURRENTLY CONFIGURED TO WORK
WITH A XXXX DISK.

PLEASE CHECK THE SYSTEM CONFIGURATION DECAL LOCATED ON THE
OUTSIDE OF THE COMPUTER TO DETERMINE THAT THIS IS CORRECT.

IF YOU ARE UNABLE TO FIND THIS DECAL, CONTACT YOUR FORTUNE DEALER.

IS DISK XXXX PRINTED ON YOUR SYSTEM CONFIGURATION DECAL?

PRESS [F1] FOR YES

PRESS [F2] FOR NO

15. Type F1

YOUR SYSTEM IS CURRENTLY CONFIGURED FOR 1 SWAP UNIT(S).

THE HARD DISK WILL NOW BE CONFIGURED FOR OPTIMAL SYSTEM PERFORMANCE. PLEASE PRESS THE FUNCTION KEY THAT CORRESPONDS TO THE NUMBER OF SWAP UNITS YOU WILL NEED OR PRESS <EXECUTE> TO RETAIN THE PRESENT CONFIGURATION:

[F1] FOR 1 SWAP UNIT

[F2] FOR 2-3 SWAP UNITS

[F3] FOR 4-6 SWAP UNITS

[F4] FOR MORE THAN 6 SWAP UNITS

YOUR DISK NOW HAS 1632 KBYTES OF SWAP SPACE (15% OF DISK SPACE), AND 8670 KBYTES OF FILE SPACE (84% OF DISK SPACE).

THE SWAP SPACE PERCENTAGE SHOWN ABOVE SHOULD BE BETWEEN 50% AND 30% FOR OPTIMAL SYSTEM PERFORMANCE. IF IT IS, ANSWER Y(ES). BY ANSWERING N(O), YOU CAN CHANGE THE NUMBER OF SWAP UNITS WHICH WILL AUTOMATICALLY ADJUST THE SWAP SPACE PERCENTAGE.

OK TO PROCEED WITH THIS SWAP SPACE CONFIGURATION (Y/N)?

16. Type F2
17. When "OK to Proceed..." message appears, type Y.

INSTALLING BOOTSTRAP LOADER....

MAKING FILESYSTEM....

FILE SYSTEM SIZE = 8670

ISIZE = 2768

M/N = 34

COPYING FILES....

FIRST PASS COMPLETE

YOU MUST NOW POWER THE SYSTEM OFF AND ON AGAIN (OR RESET)

18. When prompt to reset appears, "RESET"

FORTUNE SYSTEMS 32:16 PLEASE WAIT

1 2 3 4 5 6 7

COLD BOOT FLOPPY RELEASE 1.7 -- PART 2

MAKING LOST+FOUND/DONE

CHECKING HARD DISK

/DEV/HD02: 38 FILES 316 BLOCKS 8179 FREE

COPYING FILES FROM FLOPPY #1

FINISHED WITH FLOPPY #1. YOU MAY REMOVE IT AND INSERT FLOPPY #2.

LINKING F#1 UTILITIES

MAKING DEVICE SPECIAL-FILES

FINISHED MAKING SPECIAL-FILES.

IS FLOPPY #1 REPLACED WITH FLOPPY #2 YET (Y OR N)?

COPYING FILES FROM FLOPPY #2

FINISHED WITH FLOPPY #2, YOU MAY REMOVE IT AND INSERT FLOPPY #3.

LINKING F#2 UTILITIES

IS FLOPPY #2 REPLACED WITH FLOPPY #3 YET (Y OR N)?

COPYING FILES FROM FLOPPY #3

FINISHED WITH FLOPPY #3, YOU MAY REMOVE IT.

LINKING F#3 UTILITIES

INSTALLATION COMPLETE. PROCEEDING WITH NORMAL BOOT-UP.

/ETC/RC.PASS2.RUN: 87 KILLED

8 9

19. System will prompt you for 2nd and 3rd Cold Boot disk.

FOR:PRO SINGLE USER VERSION 1.7 WED OCT 19 18:12:48 PDT 1983

814K USER MEMORY AVAILABLE OUT OF 1024K TOTAL, 160K MAXIMUM PER PROCESS

Fortune Systems 32:16

Please set the current date and time, then press (RETURN)

Today's date is: 03/15/83

mm/dd/yy

Current time is: 04:26 PM

hh:mm A

P

Date set to Tue Mar 15 16:26:00 1983

Is this correct (yes or no)?

CHECKING YOUR FILES

FILE CHECK SUCCESSFUL

FORTUNE SYSTEMS 32:16

Press (HELP) For Assistance

Type in your name and press (RETURN):

20. Install Multi-User software through the Product Maintenance Menu.
21. Install Application Software (Fortune:Word, Multiplan, etc.) through the Product Maintenance Menu.
22. Configure Device Connections through System Management Menu.
23. RESET. When system is brought back up, should be as good as new!